



# PACKING INSTRUCTIONS FOR L-0205

- STEP 1: PACK FOLLOWING PARTS IN A PLASTIC BAG**
- 9199A GEPE LIGHT
  - 9280 MODIFIED SPEEDSTIR W/ 6525 AC ADAPTER
- PLACE PLASTIC BAG IN CENTER OF 8130 CARTON**
- PLACE (4) 8220 IN EACH CORNER OF THE CARTON**

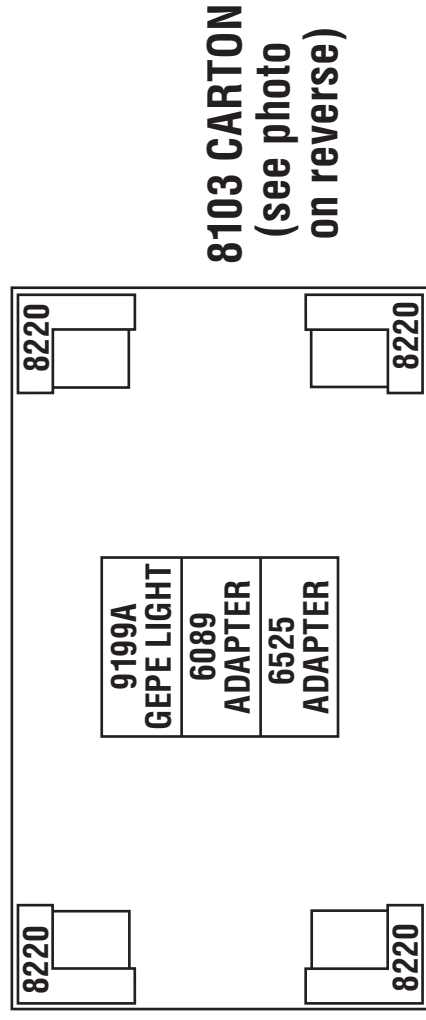

- STEP 2: WRAP R-0013-F AND R-0333-F IN BUBBLE WRAP AND PLACE INSIDE THE LAB**
- STEP 3: PLACE L-0205-HP COUNTERLAB (Rx2) IN 8103 CARTON OVER TOP OF PARTS BAG PLACE (2) 8220 ON TOP BACK CORNERS OF THE LAB**

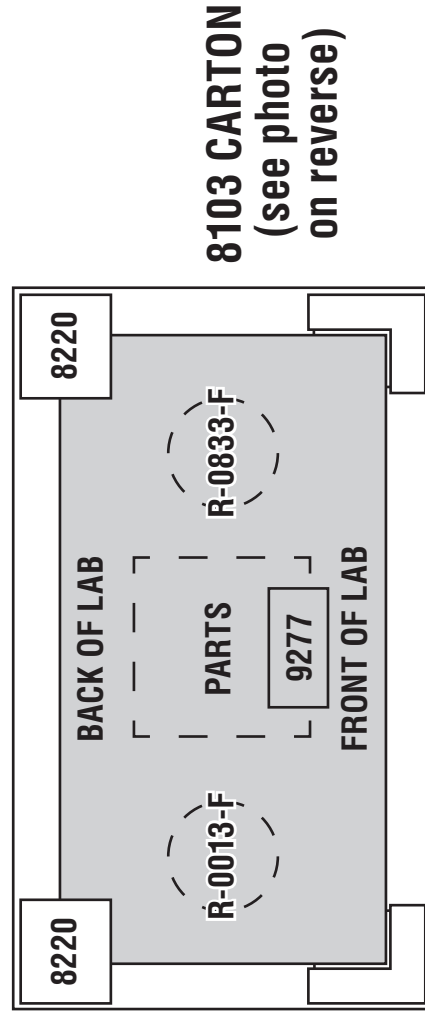

- STEP 4: PLACE REAGENT PACK 9277 ON TOP OF LAB IN FRONT**
- STEP 5: 9505 Rx2 ACCESSORY PACK IS PLACED IN CARTON W/ LAB**
- STEP 6: STUFF BROWN PAPER IN CARTON AND SEAL CARTON PLACE 7264 LABEL ON CARTON**
- STEP 7: PLACE 8034 LABEL UNDER 7264 LABEL**