


A

Assemble Base

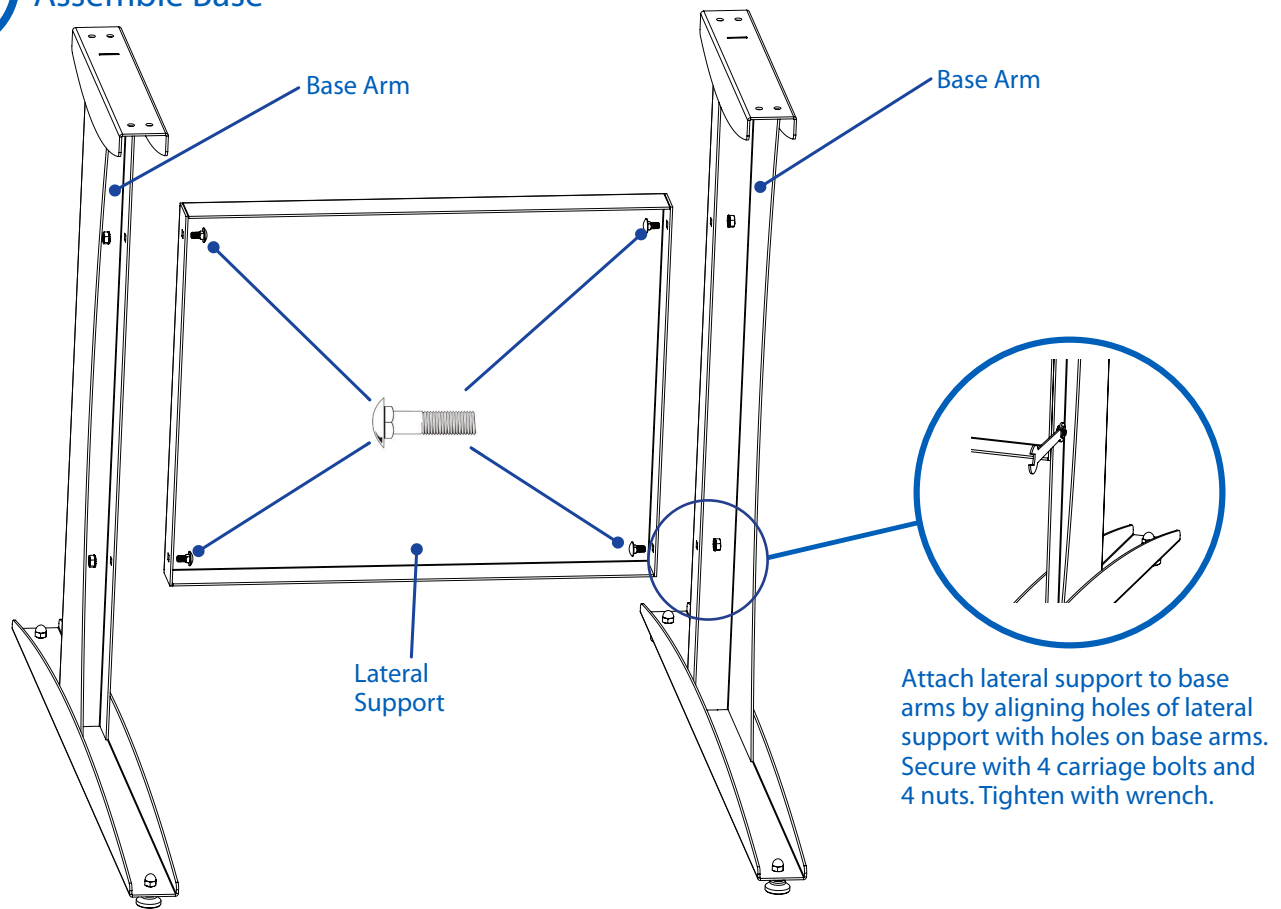

B

Install and Update iPad App

Install iPad App

1. Remove iPad from Box
2. Plug iPad connector into the iPad and the USB power adapter into the power cord provided. iPad will turn on.
3. Tap **Settings** icon .
4. Tap **WiFi** and connect to the store's Wi-Fi network. Once connected, push the home button .
5. Tap **App Store** icon .
6. Tap **Search**.
7. Type in **Test Kit Selector**.
8. Tap **Get**.
9. Tap **Install**.
10. Enter your Apple ID username and password. If you do not have an Apple ID, create a new one. Wait for the app to install.
11. Tap the app icon .
12. Install the iPad in the Retail Floor Display.

B


Install and Update iPad App (continued)


Update iPad App

1. When there is an update for the app, take the iPad out of the Retail Floor Display.
2. Push the home button ; then tap the **App Store icon** .
3. Tap **Updates**.
4. Look under Available Updates for **Test Kit Selector**.
5. Tap **update**.
6. Once the app has finished updating, push the home button .
7. Tap the **Test Kit Selector** app icon .
8. Reinstall the iPad into the Retail Floor Display.


C

Install iPad

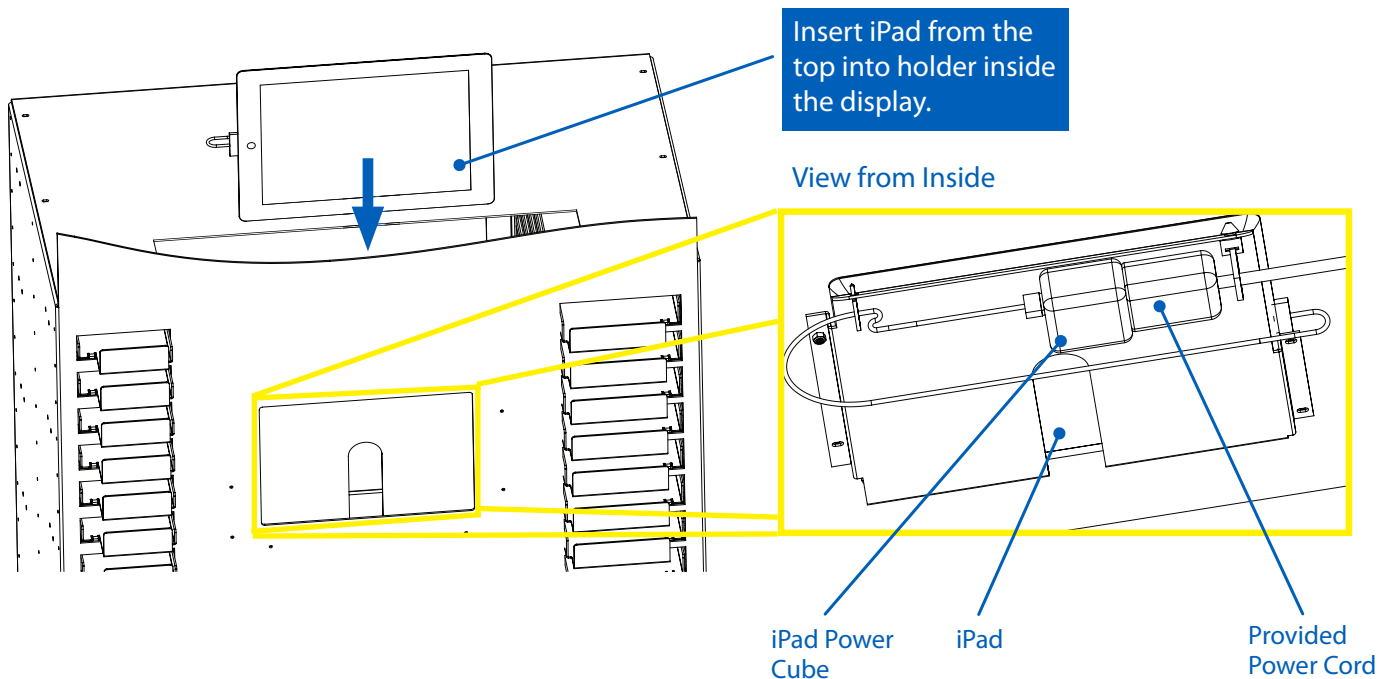

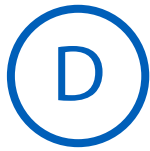

Attach Display to Base

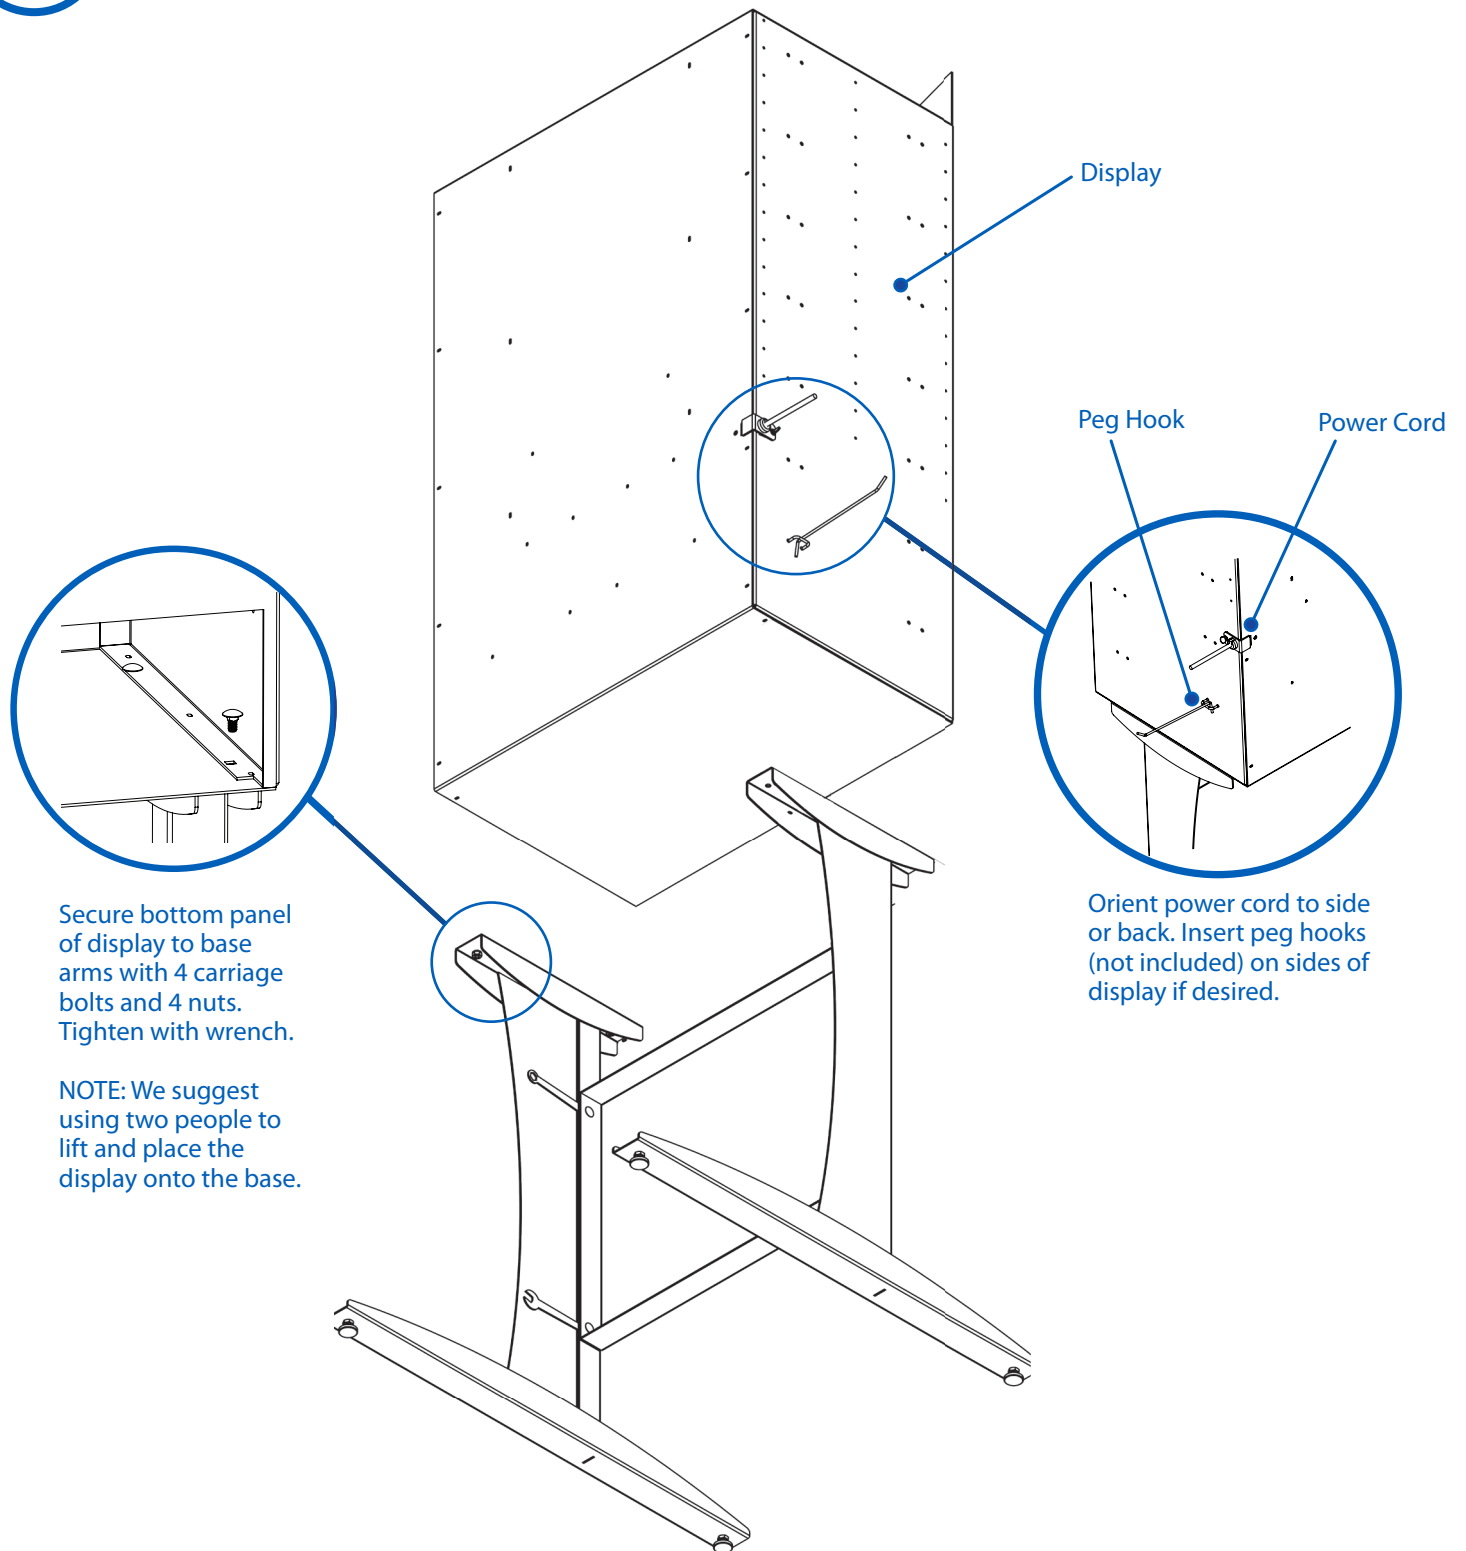


E

Set Up and Fill Display


"A" Reagents

R-0001-A (12 ea.)
 R-0002-A (12 ea.)
 R-0003-A (8 ea.)
 R-0007-A (8 ea.)
 R-0008-A (12 ea.)
 R-0009-A (12 ea.)
 R-0010-A (8 ea.)
 R-0011L-A (8 ea.)
 R-0012-A (12 ea.)
 R-0013-A (12 ea.)
 R-0014-A (12 ea.)
 R-0015-A (8 ea.)
 R-0016-A (8 ea.)
 R-0600-A-DB (12 ea.)

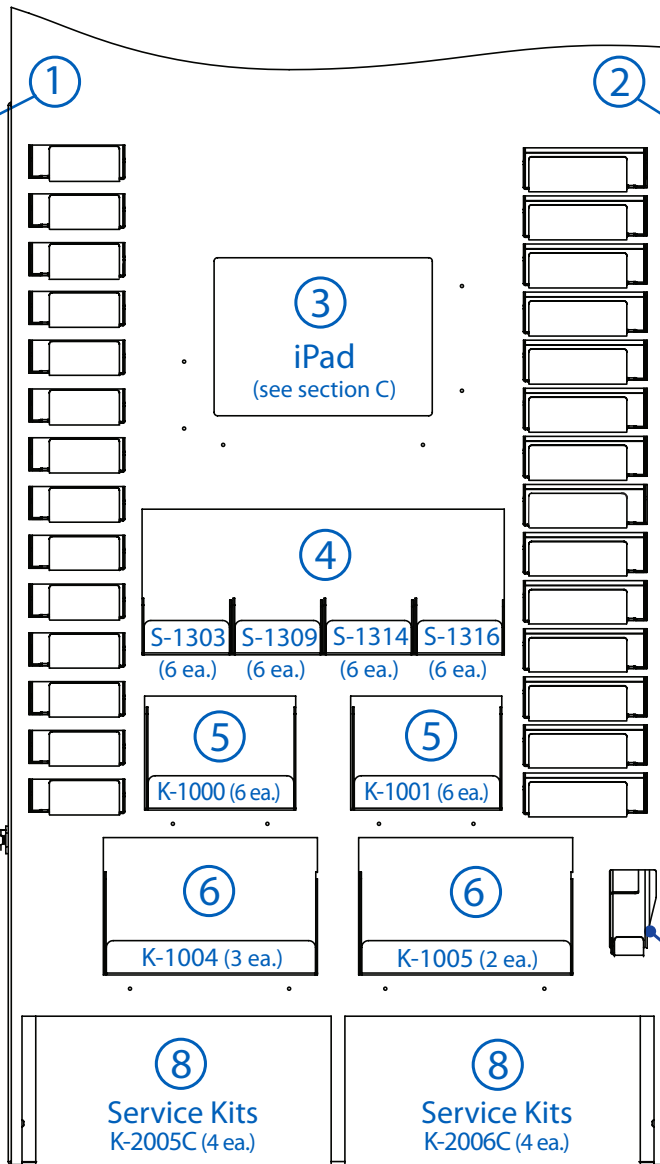


"C" Reagents


R-0001-C (6 ea.)
 R-0002-C (6 ea.)
 R-0003-C (3 ea.)
 R-0004-C (6 ea.)
 R-0005-C (3 ea.)
 R-0006-C (3 ea.)
 R-0007-C (3 ea.)
 R-0008-C (6 ea.)
 R-0009-C (12 ea.)
 R-0010-C (12 ea.)
 R-0011L-C (6 ea.)
 R-0012-C (6 ea.)
 R-0013-C (12 ea.)
 R-0871-C (12 ea.)

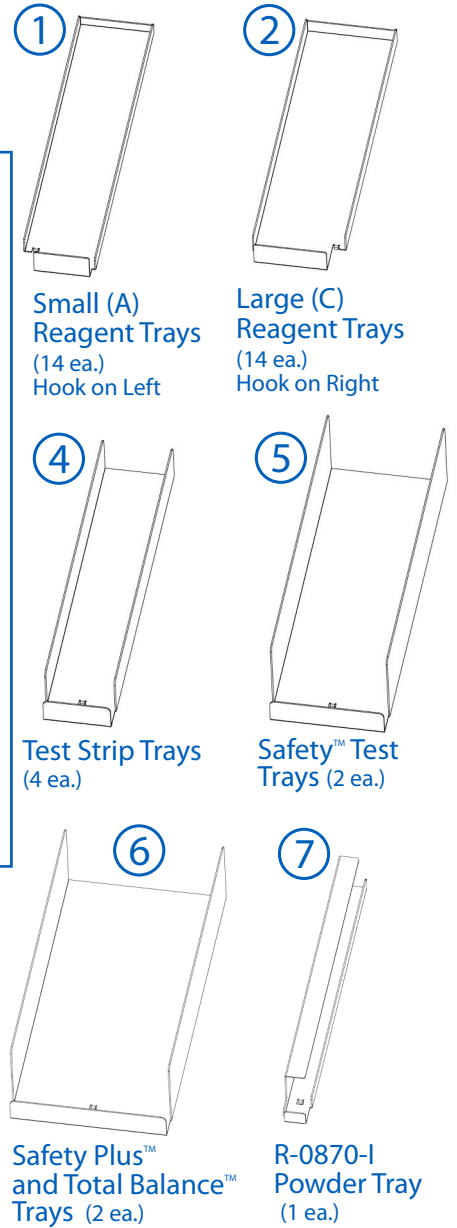


To secure trays in the display, place the hook of the tray into the slot on the display.

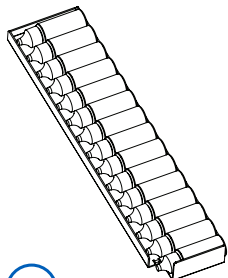

1
 How to Load Small (A)
 Reagent Trays

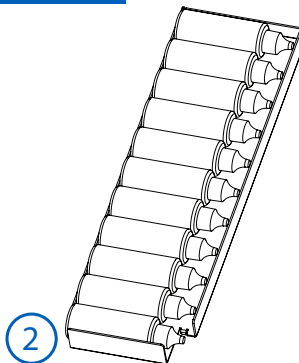

2
 How to Load Large (C)
 Reagent Trays

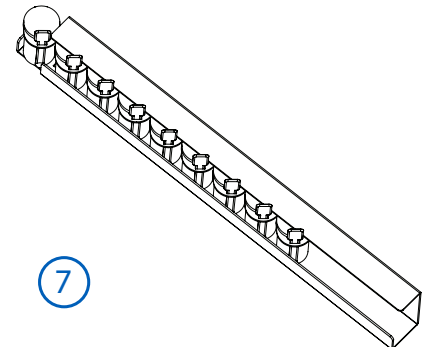

7
 How to Load Powder Tray